


3.75" Float Installation for Flex Probe

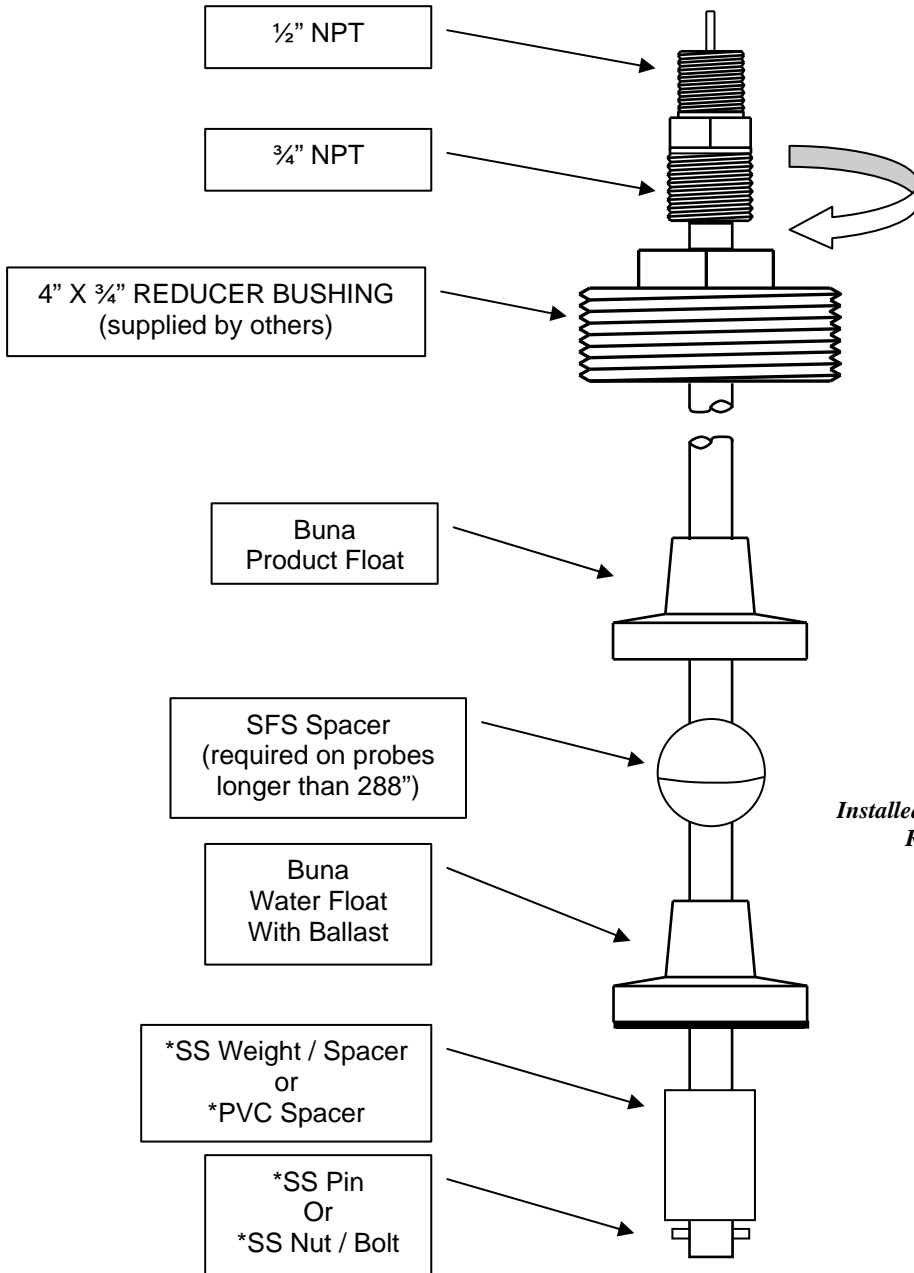

- Step 1:** Remove Pin
- Step 2:** Install reducer assembly
- Step 3:** Install product float (float without ballast)
- Step 4:** Install SFS Spacer (required on probes longer than 288")
- Step 5:** Install water float** (float with ballast)
- Step 6:** Install weight
- Step 7:** Install pin

***Magnetostrictive probes can be ordered without water float capability.*

Installed MTG-F Series probes must be lifted from tank bottom. Refer to document number 400530 for dimension.

PVC spacer and stainless steel nut / bolt



*PVC spacer and stainless steel nut / bolt for probes 10' or less. Anything larger use stainless steel weight / spacer and pin.